

GL-AR111-V2 LED Lighting Housing Installation Guidelines

Photograph	Description
	<p>燈具 1 Lighting Fixture 1</p>
	<p>鬆脫 M4 螺絲。 Loosen the M4 Screw.</p>
	<p>將 PIN 置於燈具底座內。 Place the PIN into the lamp set.</p>



使用 M4 螺絲，如圖所示，確認螺絲定位於燈具與 AR111。

Install the M4 screws back to the lamp set. (see diagram)



將固定彈片對位置入。

Place the retention spring into the lamp set.



完成。

Completed.

Photograph	Description
	<p>燈具 2 Lighting Fixture 2</p>
	<p>將 Driver 輸出端 · 連接 AR111 PIN。 Connect the output of the driver to the PIN of AR111.</p> 
	<p>將 AR111 置於燈具內。 Place the lamp into the casing.</p>



將固定彈片確認定位。
Place the retention spring on to the lamp set.




完成。
Completed.


Photograph	Description
	<p>燈具 3 Lighting Fixture3</p>
	<p>將紅色圈選處螺絲鬆開至與內圈齊平 Loosen the screw and be horizontal to the internal ring.</p>
	<p>將 AR111 如圖所示之方向置於燈具內。 Put the AR111 facing down to the lighting fixture.</p>



確認彈片固定 AR111 不脫落。
Make sure the retention spring is holding the lamp, and the AR111 sits firmly in the lighting fixture.

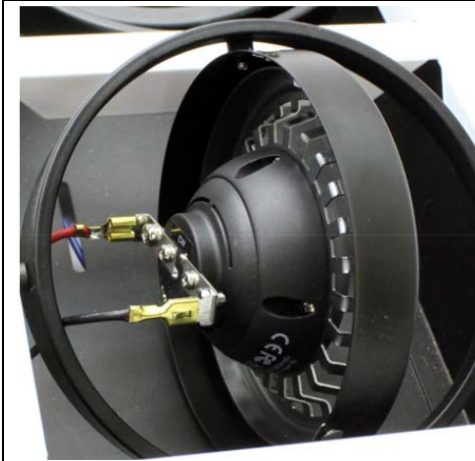

將 Driver 輸出端，連接 AR111 PIN。
Connect the output of the driver to the PIN of AR111.

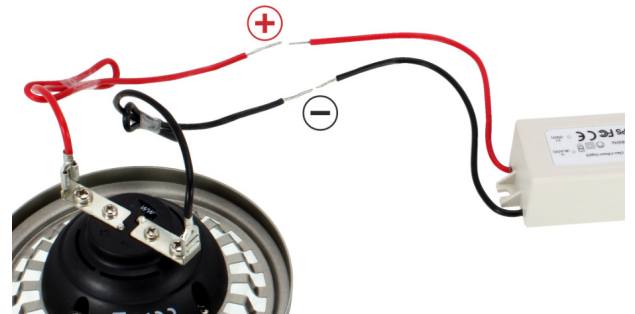

完成。
Completed.