


 


GL-PL0606A LED Panel Light (595×595mm) Installation Guidelines

Photograph	Description
	1. Unpack the GL-PL0606 LED panel light from the packaging box.
	2. Take out the LED driver and the LED panel light with caution.
	3. Connect the LED driver and the LED panel light into the DC power cord connector (red to red, black to black). Do not connect the LED panel light into any other non-compatible LED driver which may cause product damage.



4. The DC power cord connector should be properly connected, not loose.

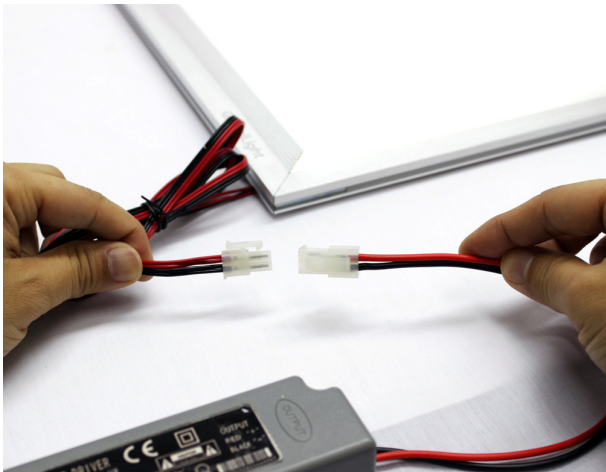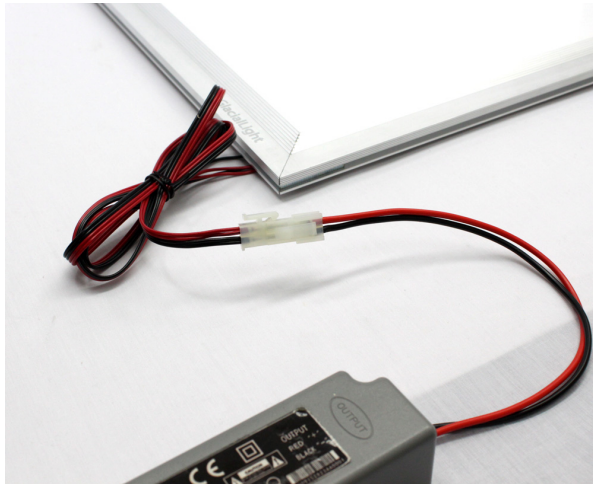

5. Turn off the main power source before installation to avoid electric shock.

Then properly insert Line (L) and Neutral (N) into the AC power connector.



 
6. The AC power connector should be properly connected, not loose.



7. Remove the ceiling where the LED driver and the LED panel light will be installed.



8. Carefully insert the LED driver and the LED panel light into the removed ceiling.

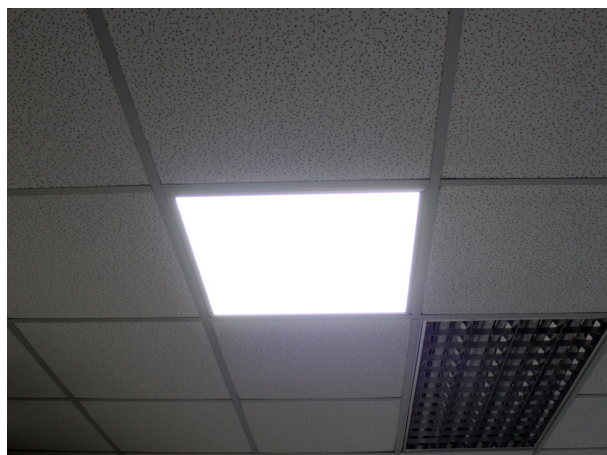

9. Turn on the AC power to light up the LED panel light.

User Manual

1. Instructions

To ease the installation process and ensure the optimal performance of the product, carry out the installation procedure in compliance with the following safety regulations.

- Unpack carefully and ensure there is no product damage during shipping. Should the product be found damaged during shipping, please return it to your supplier.
- Never connect the device with any dimmer switch.
- All the electrical wiring necessary for the proper installation of the LED panel light is supposed to be conducted by qualified personnel to prevent electric shock or product damage.
- Avoid humidity. Should the LED panel light be moistened by any liquid or fluid that may conduct electricity, immediately disconnect it from the power source.
- In case of a malfunction, turn off the power source immediately. Never try to repair the LED panel light by yourself which may cause serious damage and void your warranty. Instead, contact your local dealer for technical assistance.
- Please recycle the package.

2. Lamp

- Never touch the luminaire when it turns on or gets hot.
- Unless otherwise specified, never use LED luminaires in humid environments.
- Appropriate ambient temperature: -20 to 40°C

3. Troubleshooting

- One of the following problems may appear while you use the LED lamp:
 - ◆ No light:
Check whether your LED lamp and all other accessories are properly fitted into the fixture adequately connected to the specified power source.
- Fixture Cleaning
To optimize the light output, we recommend that you periodically clean the external diffuser. Only use a dry soft cloth, a dust brush or a vacuum cleaner and never use any liquid chemical cleaner or water to clean the lamp.

Please refer to www.GlacialLight.com for the complete installation manual.