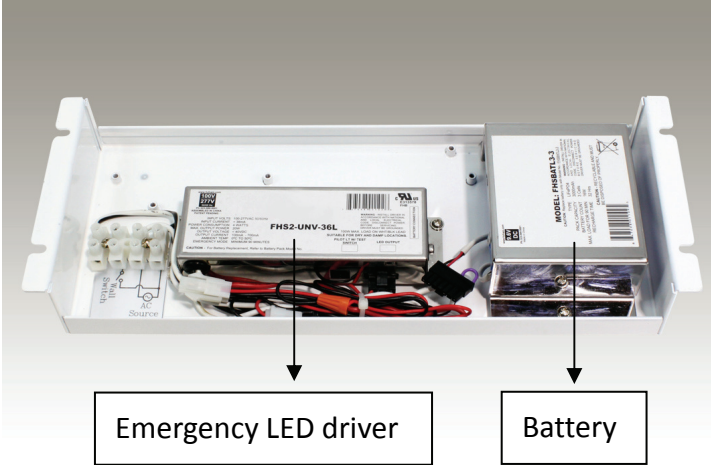

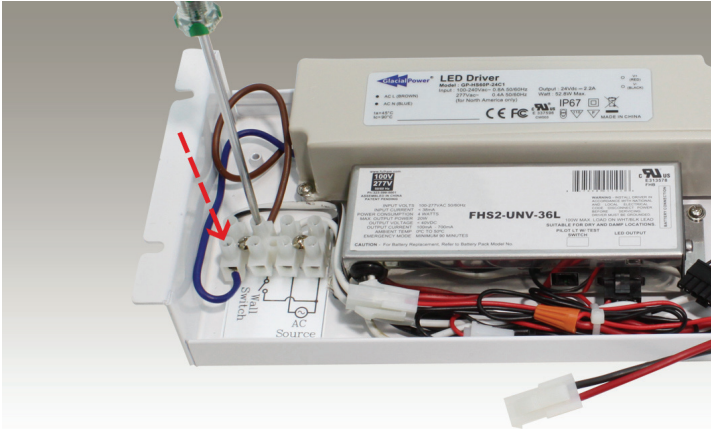
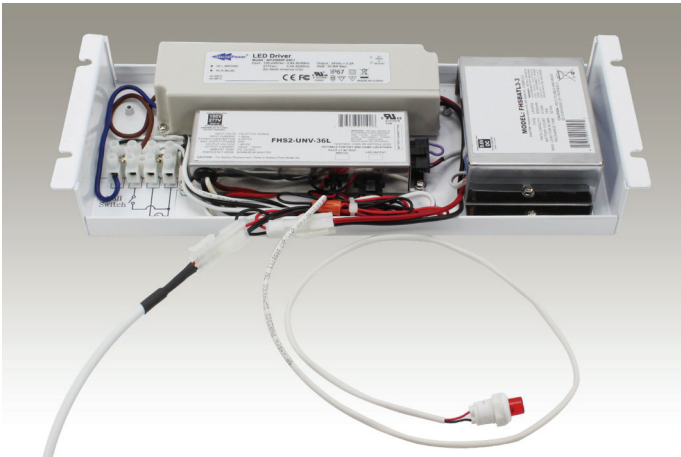



Installation Instructions for GL-EM01F-700 Emergency Backup Module (Panel Light)

Step	Photograph	Description
1.		<p>GL-EM01F-700 緊急備用模組</p> <p>GL-EM01F-700 Emergency Backup Module</p>
2.		<p>安裝 GP LED driver</p> <p>Install GP LED driver</p>
3.		<p>將 GP LED Driver 的 L/N 如圖鎖附於端子台上。</p> <p>Connect L/N of GP LED driver to the terminal block</p>

<p>4.</p>		<p>將 GP LED driver DC output connector 接到緊急備用模組</p> <p>Attach GP LED driver DC output connector to Emergency Backup Module.</p>
<p>5.</p>		<p>將緊急備用模組的 connector 接到燈具的 connector</p> <p>Attach Emergency Backup Module connector to the LED Panel Light connector.</p>
<p>6.</p>		<p>將電池的 connector 接到 emergency LED driver.</p> <p>Attach battery connector to the emergency LED driver.</p>
<p>7.</p>		<p>將 TEST SWITCH 線，接到 Emergency LED driver.</p> <p>Connect TEST SWITCH to the emergency LED driver.</p>

<p>8.</p>		<p>完成接線 Finish connection.</p>
<p>9.</p>		<p>將緊急備用模組反過來平放在燈具背面，即完成安裝 Place Emergency Backup Module on the back of LED Panel Light.</p>

Wiring Diagrams / 接線圖

