





# GL-DL Series LED Down Light Feature Installation Guidelines

Photograph	Description
	<p>(1.) Dislocate the original spring. p.s. tool assisting is recommended</p>
	<p>(2.) Place the new spring on the lamp set. (Texts facing away from the lamp set.)</p>
	<p>(3.) Put one end of the spring (in L-shape) into the spring holder. <b>Caution: Avoid the spring to flick out, please hold the spring tight.</b></p>


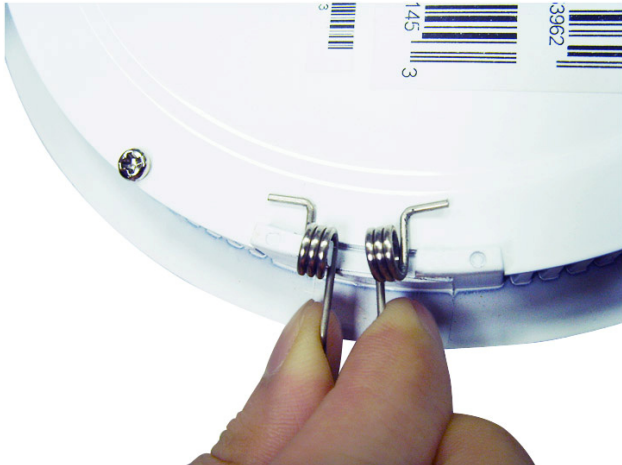


(4.) Squeeze the spring tight and place the other end into the spring holder.


**Caution: Avoid the spring to flick out, please hold the spring tight.**

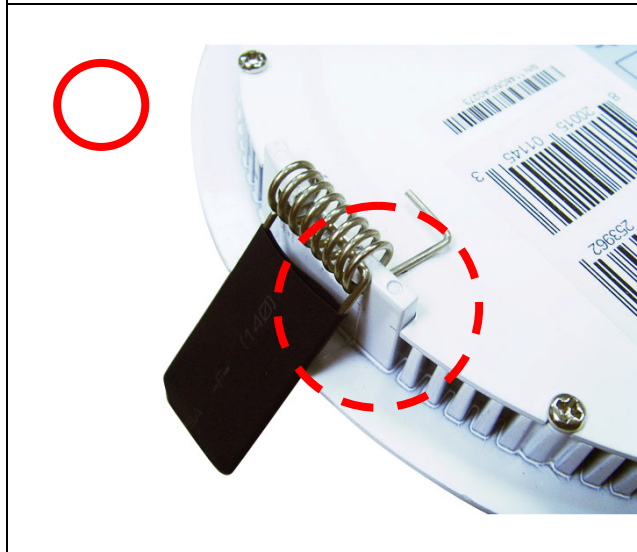

(5.) Please make sure the end of the spring is able to slightly rotate.

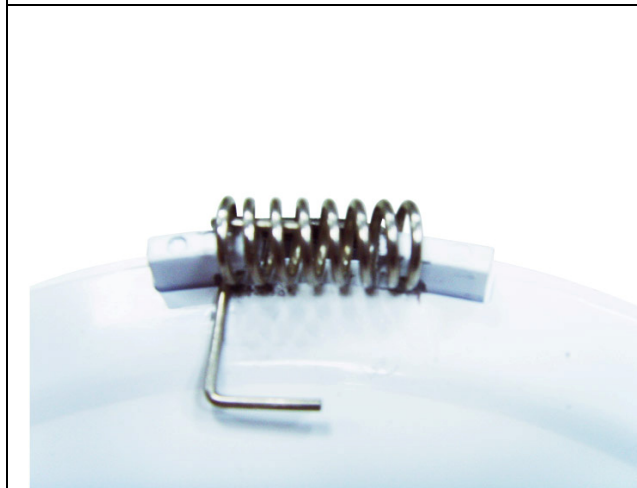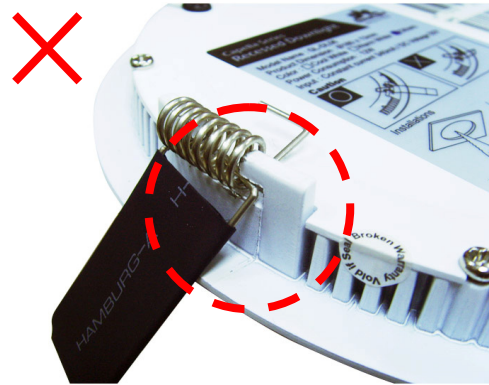

(6.) Adjust and locate the spring to the middle of the spring holder.

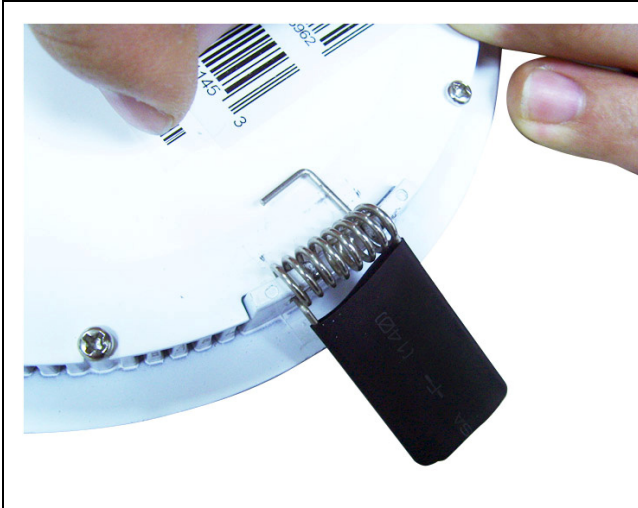

(7.) Complete