
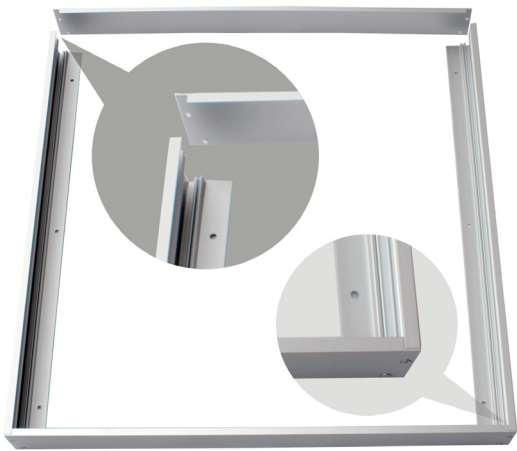
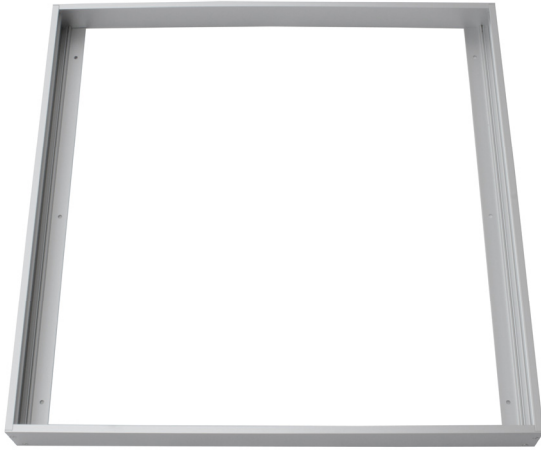
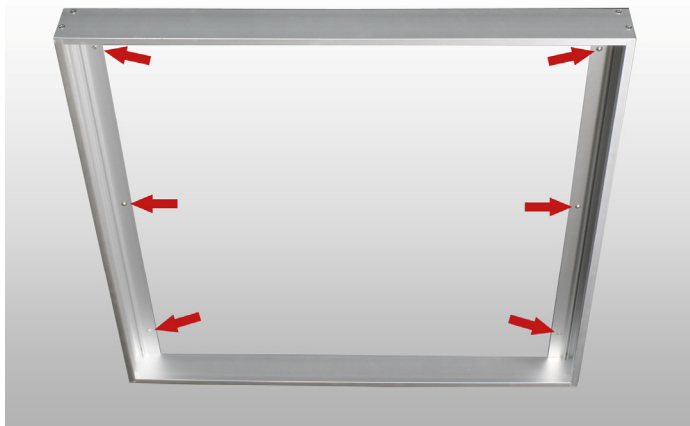


Installation Instructions for Surface Mount Panel Light

吸顶安装边框规格书

Photograph	Description
	<p>取出配件。 (L 型邊框*2 / 側蓋板*2 / M3.5 自攻螺絲*8 / M5 鎖牆螺絲*6)</p> <p>Gather parts for frame assembly (L shape bracket x2 / Side bracket x2 / M3.5 screw x8 / M5 screw x6)</p>
	<p>使用 M3.5 螺絲，將側蓋板鎖在 L 型邊框兩側，一邊使用 4PCS，總共 8PCS。</p> <p>Use M3.5 screws to attach side brackets to L shape brackets. Each side bracket attaches with 4 screws (2 per corner), for a total of 8 screws.</p>
	<p>鎖上完成。</p> <p>Frame assembly completed.</p>




使用 M5 鎖牆螺絲將吸頂框鎖在天花板或牆面上，一邊使用 3PCS，總共 6PCS。

Use M5 screws to attach the frame to a ceiling or wall. 3 screws are used per side for a total of 6 screws.



取下一邊側蓋板。

Remove one side bracket.

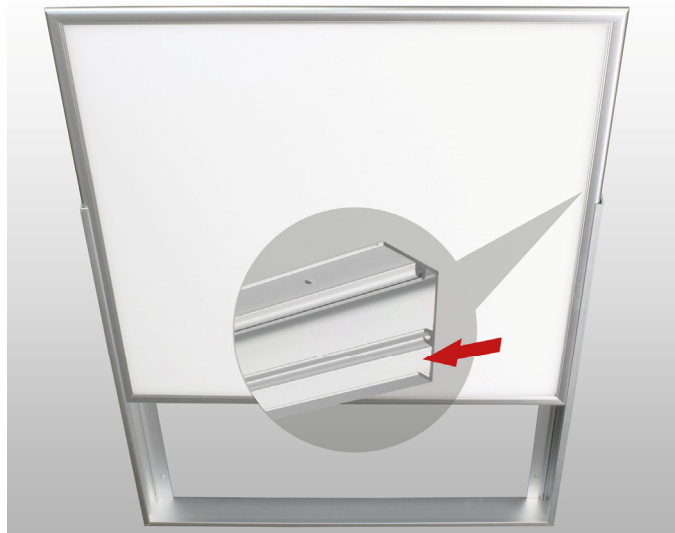


將平板燈電源接好後滑入槽內。

Connect the driver with the panel light, then slide the panel light into the groove in the L-shaped brackets.



將平板燈推到底部固定。

Push the panel light to the bottom of the frame and make sure it is seated well.

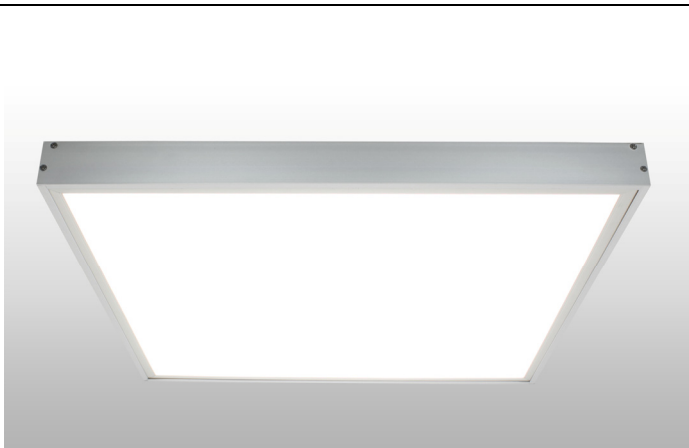

再將取下的側蓋板鎖回去，即完成。

Screw the side bracket back on.
Installation complete!